



INSTALL THE ITEMS IN THE ORDER SHOWN IN THE DRAWING

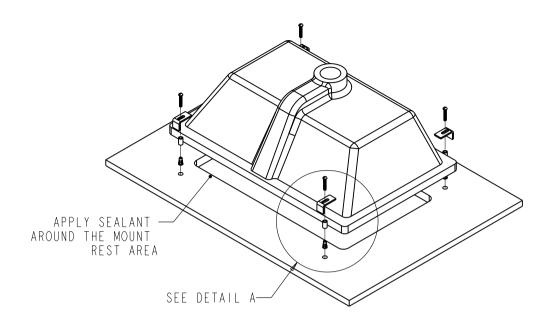

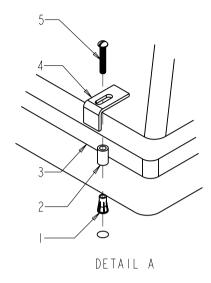

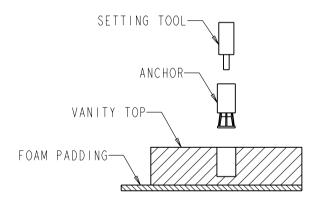

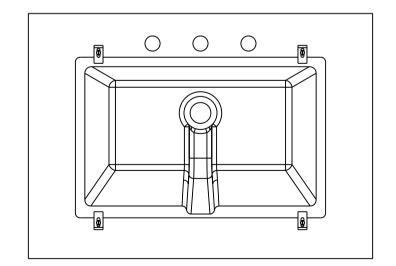

NOTE: SETTING TOOL IS USED ONLY FOR INSERTING THE ANCHOR & LEAD (INCLUDES STEP I & 2) INTO THE HOLE.

bardwara	ITEMI:				MATERIAL:		
resources	S INSTALLATION-INSTRUCTIONS			WEIGHT:		g	
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS				PROJECTION:	(D.	
DRAWING IS THE SOLE PROPERTY OF HARDWARE RESOURCES INC. ANY	RTY OF TOLERANCE UNLESS OTHERWISE SPECIFIED. X.S. AMY X.S. HM ±0.10 X.X. HM ±0.10 X.X. HM ±0.05 ANGULAR: ±0.5"	UNIT:	DRAWN BY:	m.liu	DATE:		
REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN		SIZE:	CHECKED BY:	CHECKED BY:		DATE:	
PERMISSION OF HARDWARE RESOURCES INC. IS PROHIBITED.			APPOROVED B	Y:	DATE:		