
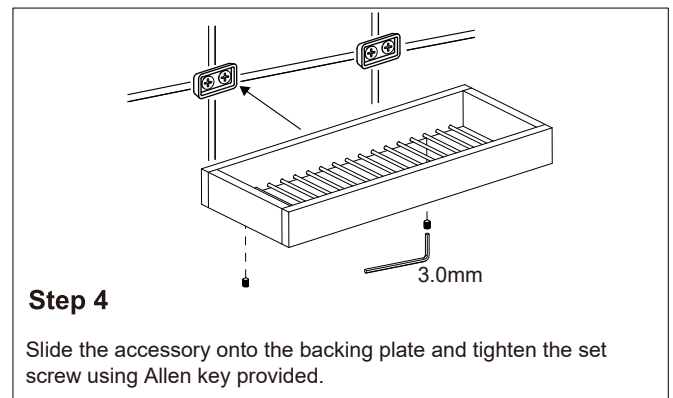
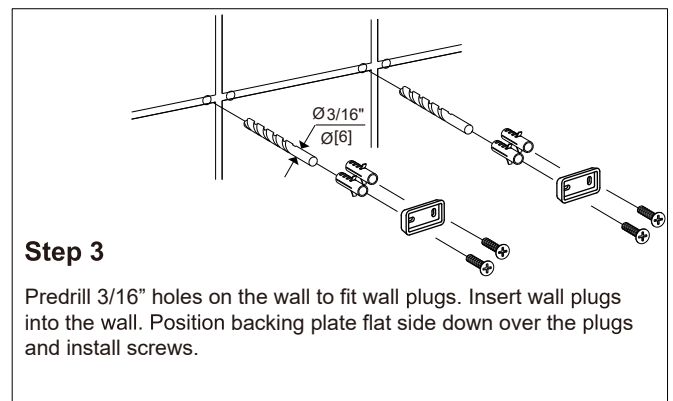
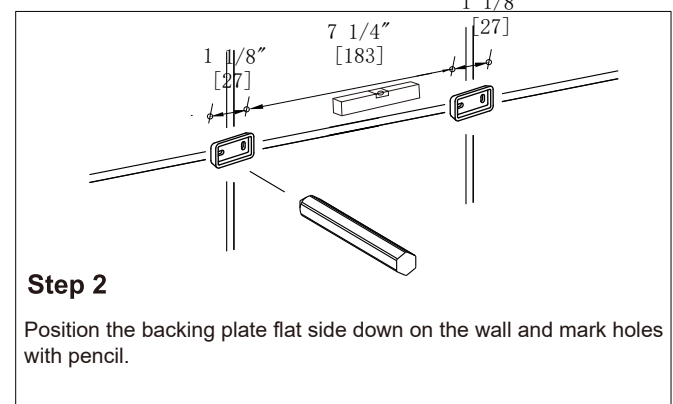
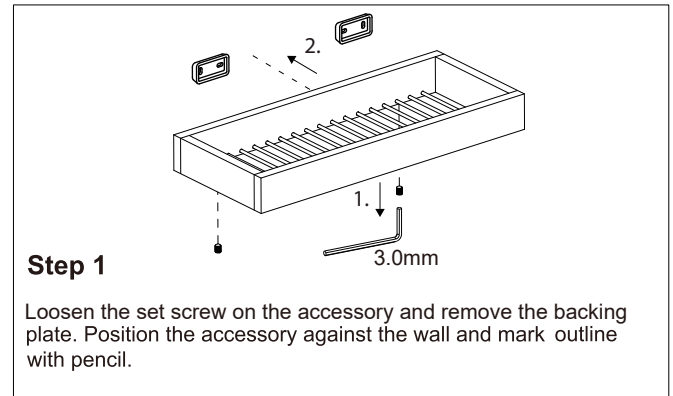


BERLIN COLLECTION

SHOWER BASKET

232603

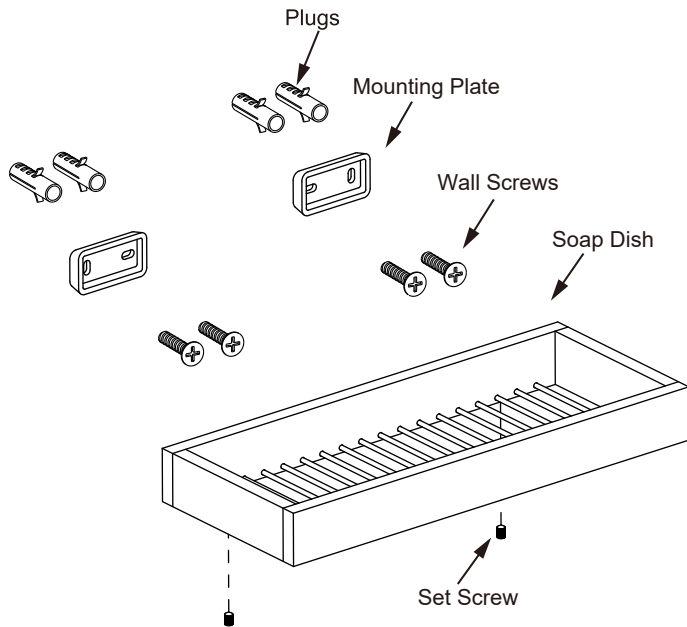

Tools required for installation

Level	Pencil
Screwdriver	Drill
Hammer	