


PLACE WAX SEAL ON TOILET'S FLUSH HOLE.



REMOVE TOILET SEAT FROM ITS BOX AND PLACE IT IN NORMAL POSITION ON THE CLOSET FLANGE, WITH THE SCREWS INSIDE ITS BASE; BE SURE IT STANDS STRAIGHT. NEXT, PLACE THE NUTS AND SECURE THEM WELL WITH AN ADJUSTABLE WRENCH.

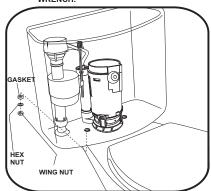


ONCE THE TANK IS PLACED ON THE BOWL, INSERT GASKET AND WASHER ON THE SCREW; ONCE INSERTED, TIGHTEN HEX NUT UNTIL TANK IS WELL SECURED; BE SURE NOT TO OVERTIGHTEN FOR IT COULD BREAK THE TANK.




TO CONTROL WATER LEVEL IN TANK, TAKE BOLT AND TURN IT COUNTERCLOCKWISE TO DECREASE WATER LEVEL AND CLOCKWISE TO INCREASE IT.


IMPORTANT: Water level should be exactly as marked in the drain valve's overflow tube in order to flush properly.

INSTALLATION INSTRUCTIONS FOR DUAL FLUSH WITH HANDLE




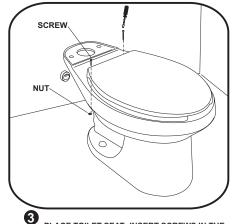


PLACE TOILET SEAT; INSERT SCREWS IN THE HOLES ON SEAT'S RIM; TIGHTEN SCREWS UNTIL IT IS WELL SECURED.

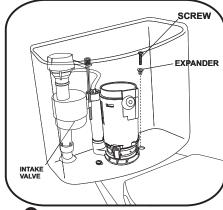


4 TIGHTEN SCREWS ALONG WITH EXPANDERS INTO TANK; SIT TANK ON BOWL.

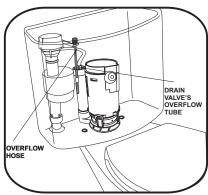

TAKE OVERFLOW TUBE AND THE BASE TO FIX
THE OVERFLOW TUBE; INSERT ONE END ON
THE INTAKE VALVE TUBE AND THE OTHER END
ON THE DRAIN VALVE'S OVERFLOW TUBE.

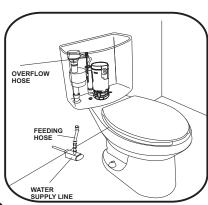

TO SUPPLY WATER TO THE TOILET USE A FEEDING HOSE, WHICH HAS TO BE CONNECTED TO THE WATER SUPPLY LINE IN THE FLOOR.

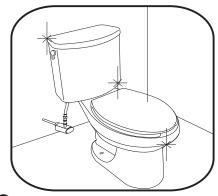

INSTALL TANK COVER. READY TO WORK!

