

CAUTION – RISK OF SHOCK –


Disconnect Power at the main circuit breaker panel or main fuse box before starting and during the installation.

- 1) Find the appropriate threaded holes on mounting strap that align with hole distance in canopy. Thread mounting screws into threaded holes starting from outlet box side.
- 2) Attach mounting strap to outlet box with strap mounting screws. Mounting strap can be adjusted to suit position of fixture.
- 3) Grounding instructions: (See Illus. A or B)

A) On fixtures where mounting strap is provided with a hole and two raise dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.

B) On fixtures where a cupped washer is provided. Put ground wire from outlet box under cupped washer and green ground screw and thread screw into hole in mounting strap.


If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector, after following the above steps. Never connect ground wire to black or white power supply wires.

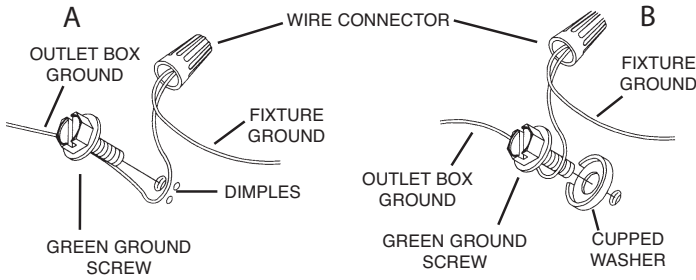

- 4) Make wire connections. Reference chart for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)

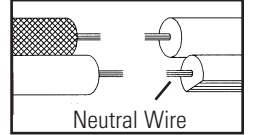

- 5) Push fixture to wall carefully passing mounting screws with holes in canopy. Make sure all wires are inside canopy and do not get pinched between wall and canopy of fixture.
- 6) Thread lockup knobs onto mounting screws and tighten to secure fixture to wall.
- 7) Slip the curved end of fixture arm through the loop on the fixture roof. Align the holes of the fixture arm with the holes in the canopy.
- 8) Thread lock-up studs through the holes of the arm, and into the canopy. Tighten knobs to secure arm in place.
- 9) Insert recommended bulb. (Not supplied)
- 10) Raise glass up through trim, into fixture, passing glass over socket.
- 11) Turn glass to secure glass in place. (DO NOT over tighten.)
- 12) Carefully raise glass trim up to fixture. Fit the studs of the glass trim up through the holes in the fixture roof.
- 13) Thread lock-up knobs (for glass trim) down onto protruding studs from roof. Tighten screws to secure trim in place.

INSTRUCTIONS FOR MOUNTING FIXTURE OUTDOORS AND/OR IN WET LOCATIONS.

- 14) Mounting surface should be clean, dry, flat and 1/4" larger than the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- 15) With silicone caulking compound, caulk completely around where back of canopy meets the wall surface to prevent water from seeping into outlet box.

